

Which device do you want to configure? Choose the device by clicking on one of the devices in the list below.

Server Name	Connection	Mac Address
MESR902T-000BEB000040	10.1.2.121	00:0B:EB:00:00:40
MESR902T-000BEB000043	10.1.2.123	00:0B:EB:00:00:43



Contents

- [General](#)
- [Network](#)
- [Modbus TCP](#)
- [Port 1 Serial](#)
- [Port 1 Modbus](#)
- [Port 1 ID Remap](#)
- [Port 2 Serial](#)
- [Port 2 Modbus](#)
- [Port 2 ID Remap](#)
- [Modbus ID Routing](#)
- [Modbus Priority](#)
- [Save](#)
- [Logout](#)

Port 2 - Modbus Slave ID Remapping

- From ID: - To Port ID: -
- From ID: - To Port ID: -
- From ID: - To Port ID: -
- From ID: - To Port ID: -
- From ID: - To Port ID: -

Save Back Next

Help

The first box in line is the starting ID of a range you want to remap. Valid value range is from 1 to 255.

The second box in line is the last ID of that range. Valid value range is from 1 to 255.

The third box in line is the start of the remap range on the serial port. Valid value range is from 1 to 255.

The fourth box in line is auto filled in based on the range filled in the first 3 boxes. Valid value range is from 1 to 255.