



- (1) XTend OEM RF module with RPSMA connector
- (1) XTend OEM RF module with MMCX connector
- (1) 1/2 wave dipole antenna with RPSMA connector
- (1) 1/2 wave dipole antenna with MMCX connector
- (2) RS-232 / RS-422 / RS-485 PC serial interface boards
- (2) DSub-9 serial cables
- (2) 9V 1A power adapters
- (1) Serial loopback adapter
- (1) Male-to-male null modem adapter
- (1) Female-to-female null modem adapter
- (1) DB-9 male to RJ-45 female adapter
- (1) DB-9 female to RJ-45 female adapter
- (1) CD with X-CTU™ test/config utility software, manuals and documentation

*Development kits that are sent to international customers do not include a power supply*