



EIR410-2SFP-T

User Manual



EIR410-2SFP-T

Documentation Number: EIR410-2SFP-T- 0109m



International Headquarters

B&B Electronics Mfg. Co. Inc.

707 Dayton Road

Ottawa, IL 61350 USA

Phone (815) 433-5100 -- **General Fax** (815) 433-5105

Website: www.bb-elec.com

European Headquarters

B&B Electronics Ltd.

Westlink Commercial Park

Oranmore, Co. Galway, Ireland

Phone +353 91-792444 -- **Fax** +353 91-792445

Website: www.bb-europe.com

©2008 B & B Electronics Mfg. Co. Inc. No part of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photography, recording, or any information storage and retrieval system without written consent. Information in this manual is subject to change without notice, and does not represent a commitment on the part of B&B Electronics Mfg. Co. Inc.

B&B Electronics Mfg. Co. Inc. shall not be liable for incidental or consequential damages resulting from the furnishing, performance, or use of this manual.

All Brand names used in this manual are the registered trademarks of their respective owners. The use of trademarks or other designations in this publication is for reference purposes only and does not constitute an endorsement by the trademark holder

Table of Contents

1. Introduction	1
<i>Features.....</i>	<i>1</i>
<i>Package List</i>	<i>2</i>
2. Hardware Description.....	3
<i>Physical Dimension</i>	<i>3</i>
<i>Front Panel</i>	<i>3</i>
<i>Top View.....</i>	<i>4</i>
<i>LED Indicators</i>	<i>5</i>
<i>Ports</i>	<i>6</i>
<i>Cabling.....</i>	<i>10</i>
<i>Wiring the Power Inputs</i>	<i>11</i>
<i>Wiring the Fault Alarm Contact.....</i>	<i>12</i>
3. Mounting Installation.....	13
<i>DIN-Rail Mounting</i>	<i>13</i>
<i>Wall or Panel Mount Plate Mounting</i>	<i>15</i>
4. Hardware Installation	16
<i>Installation Steps</i>	<i>16</i>
5. Network Application	17
6. Troubleshooting.....	18
7. Technical Specification.....	19

Introduction

The EIR410-2SFP-T is an industrial DIN mount, unmanaged 10 port Ethernet switch with Gigabit capability. It has (8) 10/100 copper Ethernet ports and (2) Gigabit Combo ports that support copper or SFP module connections.

Features

- System Interface/Performance
 - RJ-45 port support Auto MDI/MDI-X Function
 - SFP (Mini-GBIC) supports 100/1000 Dual Mode
 - Store-and-Forward Switching Architecture
 - Back-plane (Switching Fabric): 5.6Gbps
 - 1Mbits Packet Buffer
 - 8K MAC Address Table
 - Supports Wide Operating Temperature of -40 to 75°C
- Power Supply
 - Wide-range Redundant Power Design
 - Power Reverse Polarity Protected
 - Overload Current Removable Fuse Present
- Case/Installation
 - IP-30 Protection
 - DIN Rail and Wall Mount Design
- Provides surge protection 3,000 VDC for power line
- Supports 6,000 VDC Ethernet ESD protection

Package List

- (1) EIR410-2SFP-T, 10 Port Gigabit Industrial Ethernet Switch
- (1) Quick Start Guide
- (1) CD ROM with User Manual
- (2) Wall Mounting Bracket and Screws


Hardware Description

Physical Dimension

(W x D x H) is 72mm x 105mm x 152mm (2.8 x 4.1 x 6.0 inches)

Front Panel

The Front Panel of the EIR410-2SFP-T is shown below.

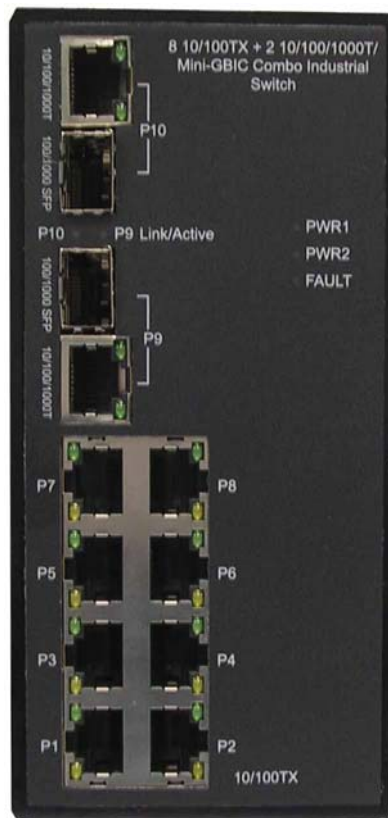

Top View

The top panel view of the EIR410-2SFP-T is equipped with one terminal block connector that consists of two 12 to 48 VDC power inputs and the fault alarm output.



T

LED Indicators

LED	Status	Meaning
PWR1	Green	Power 1 is active
	Off	No power at input 1
PWR2	Green	Power 2 is active
	Off	No power at input 2
Fault	Red	Power 1 or Power 2 is inactive
	Off	Power 1 and 2 are both functional, or no power is applied
P9, P10 (10/100/1000T, Upper LED)	Green	Connected to network
	Blinks	Networking is active
	Off	Not connected to network
P9, P10 (10/100/1000T, Lower LED)	Green	The port is operating at speed of 1000M
	Off	The port is disconnected or operating at speed of 10/100M
Link/Active (P9, P10 SFP)	Green	SFP port is linking
	Blinks	Data is transmitting or receiving
	Off	Not connected to network
P1 to P8	On	Connected to network

(Green LED)	Blinks	Networking is active
	Off	Not connected to network
P1 to P8 (Yellow LED)	On	Full duplex operation
	Blinks	Collision of packets occurs
	Off	Half duplex operation or not connected to network

Ports

- **RJ-45 ports**
- **RJ-45 ports:** Eight RJ-45 ports auto-sense for 10, 100 Mbps while two ports auto-sense for 10, 100 or 1000 Mbps device connections. The auto MDI/MDIX feature allows connections to switches, workstation and other equipment without changing straight through or crossover cabling. The charts below show the cable pin assignments for straight through and crossover cables.
- **RJ-45 Pin Assignments**

Pin Number	Assignment
1	Tx+
2	Tx-
3	Rx+
6	Rx-

Note “+” and “-” signs represent the polarity of each wire pair.

All copper ports on the EIR410-2SFP-T support automatic MDI/MDI-X operation, you can use straight-through cables (See Figure below) for all network connections to PCs or servers,


SFP slot until a click is heard. With the SFP module (fiber optic connection), the switch can transmit speed up to 1000 Mbps and you can prevent noise interference from the system and get extended transmission distance, depending on the SFP module used.

Note *The SFP/Copper Combo port can't both be used at the same time. The SFP module has the highest priority. If a 1000M SFP transceiver is inserted into the SFP cage and a remote device is connected to the SFP port, the copper combo port will link down. If a 100M SFP transceiver is inserted into the SFP cage the copper combo port will link down regardless of the connection status of the remote device.*

To connect the transceiver and fiber cable, follow the steps below.

(Note: SFP modules typically terminate with an LC fiber connector)

First, insert the SFP transceiver into the SFP module cage. Notice that the triangle mark is at the bottom of the module.

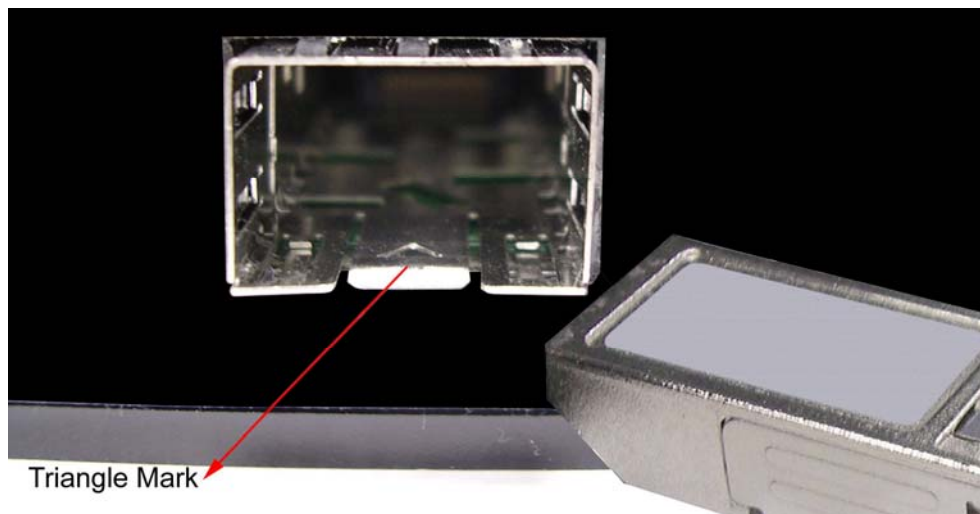


Make sure the module is aligned correctly and then slide the module into the SFP slot until a click is heard.



Transceiver Inserted


Second, insert the fiber cable into the transceiver.

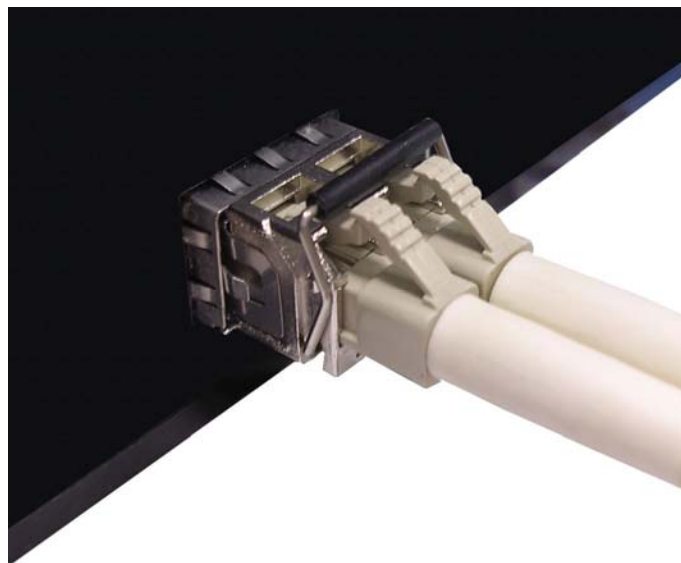

LC connector to the transceiver


To remove the LC fiber cable and SFP transceiver, follow the steps below:

First, press the upper side of the LC connector down and pull it out before releasing.

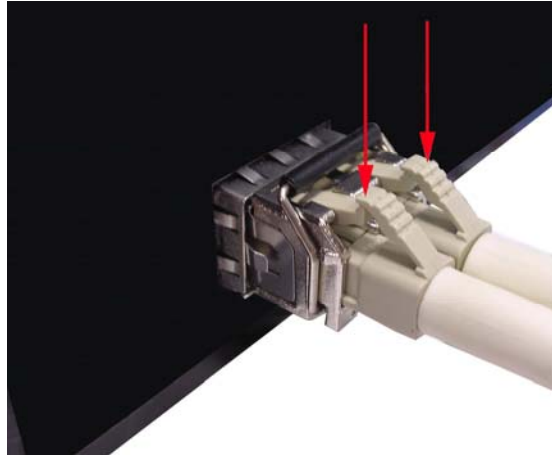

Remove LC connector

Second, swivel the metal latch away from the switch and pull the transceiver out.

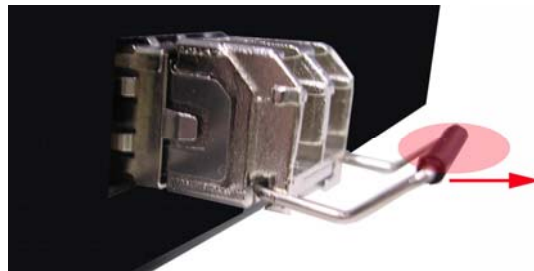

Pull out from the transceiver

Cabling

Use unshielded twisted-pair (UTP) or shielded twisted-pair (STP) cable.

10Mbps: Use category 3, 4, 5 or greater cable


100Mbps: Use category 5 or greater

1000Mbps: Use category 5e or greater cable


Cable distances should be less than 100 meters (328 ft.) long.

Wiring the Power Inputs

Follow the steps below to insert the power wire.

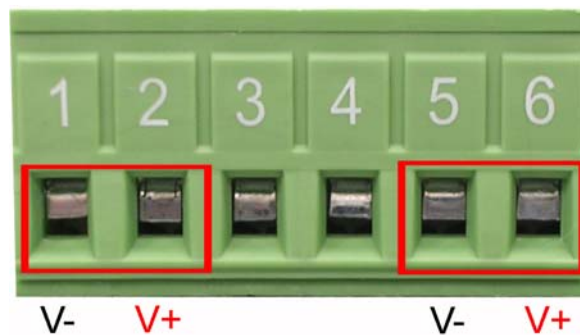

1. Insert the positive and negative wires into the V+ and V- contacts on the terminal block connector.

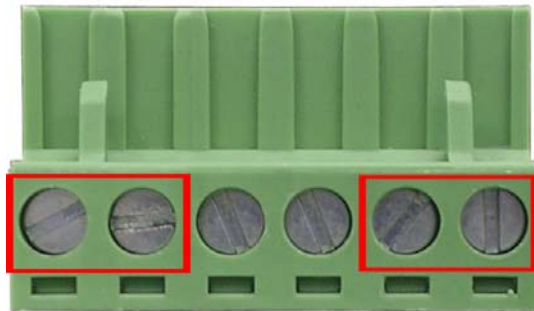

2. Tighten the wire-clamp screws to prevent the wires from becoming loose.

Wiring the Fault Alarm Contact

The fault alarm contact is in the middle of the terminal block connector as shown below. If one of the power sources fails a fault will be detected causing the circuit to open.




Insert the wires into the fault alarm contact (No. 3 & 4)

Note The wire gauge for the terminal block should be 12 to 24 AWG.

Mounting Installation


DIN-Rail Mounting

The DIN rail clip comes screwed on to the switch, from the factory. If the DIN rail clip is not screwed on the switch, please see the following figure to re-attach the DIN-Rail clip. Then follow the steps below to hang the switch onto a DIN rail.

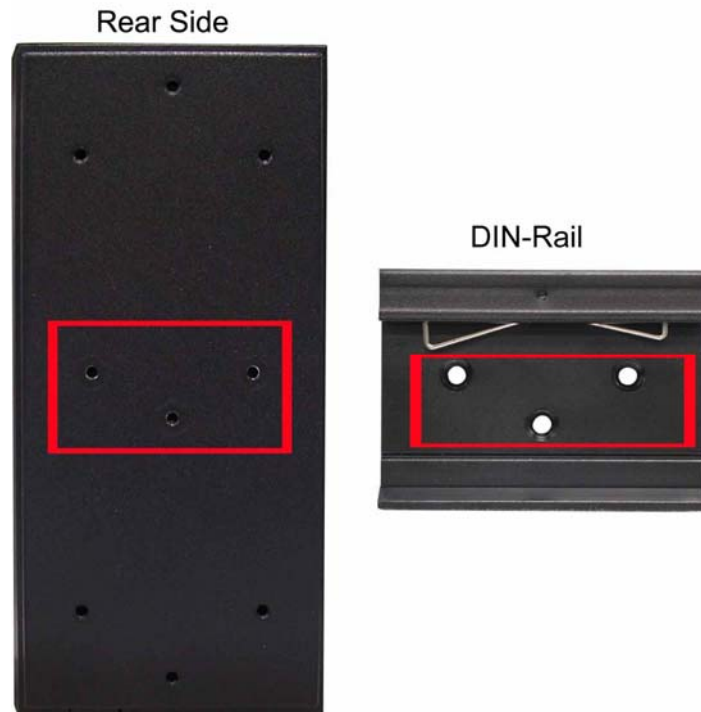


1. Use the screws to screw the DIN rail clip onto the switch.
2. To remove the DIN rail clip, reverse step 1.

3. First, insert the top of DIN rail clip onto the piece of DIN rail track.

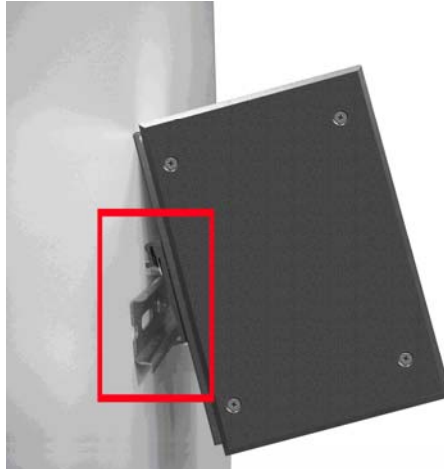

4. Then, lightly push the bottom of the switch so it can snap the rest of the way onto the DIN rail track.

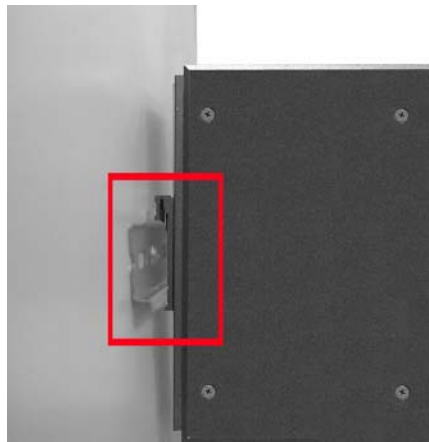


5. Check that the switch is held tightly to the DIN rail track.
6. To remove the switch from the track, reverse the steps above.
 - First pushing down lightly on the switch will give enough room for the bottom of the switch to clear the bottom of the DIN rail track.
 - Pulling slowly at the bottom of the switch will bring the switch out so that the switch can now be carefully lifted off the DIN rail track.

Wall or Panel Mount Plate Mounting

Follow the steps below to mount the switch with the wall mount plate.

1. Remove the DIN rail clip from the switch; loosen the screws to remove the DIN rail clip.
2. Place the wall mount plate on the rear panel of the switch.
3. Use the screws to screw the wall mount plate onto the switch.
4. Use the hook holes at the corners of the wall mount plates to hang the industrial switch on the wall.
5. To remove the wall mount plate, reverse the above steps.

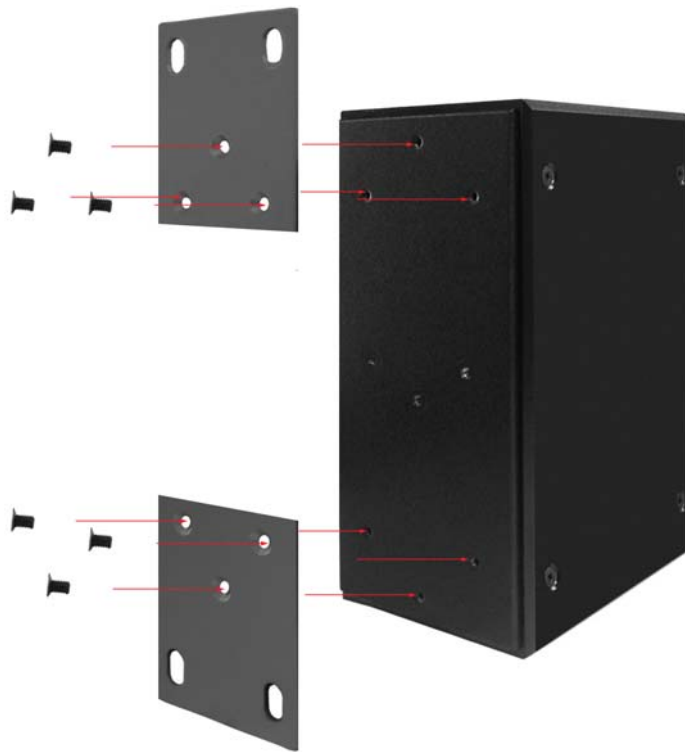


Hardware Installation

Installation Steps

1. Unpack the switch.
2. Check if the DIN rail clip is screwed on the Industrial switch or not. If the DIN rail clip is not screwed onto switch, please refer to **DIN-Rail Mounting** section for DIN-Rail installation. If the user wants to wall mount or panel mount the switch, then please refer to **Wall or Panel Mount Plate Mounting** section for wall plate installation.
3. To hang the Industrial switch on the DIN-Rail track or wall, please refer to the **Mounting Installation** section.
4. Power on the Industrial switch. Please refer to the **Wiring the Power Inputs** section for knowing the information about how to wire the power. The power LED on the Industrial switch will light up. Please refer to the **LED Indicators** section for indication of LED lights.
5. Prepare the twisted-pair, straight through Category 5/above cable for Ethernet connection.
6. Insert one end of UTP/STP cable into the Industrial switch RJ-45 port and the other end to the network device's RJ-45 port, e.g. Switch PC or Server. The RJ-45 port LED on the Industrial switch will light up when the cable is connected with the network device. Please refer to the **LED Indicators** section for LED light indication.
7. When all connections are set and LED lights all show in normal, the installation is complete.

Network Application

The diagram below shows a typical switch installation for the EIR410-2SFP-T.

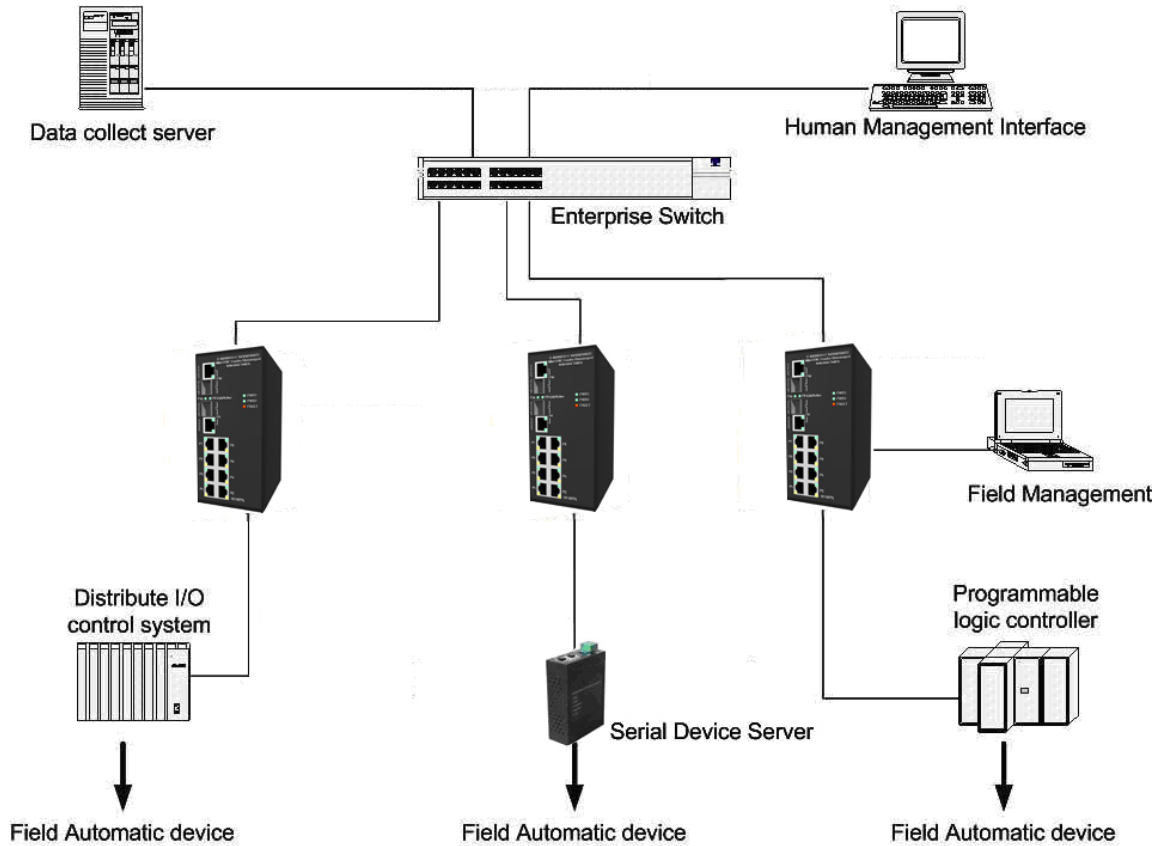

Troubleshooting

- Verify that you are using a power supply ranging from 12 to 48VDC. Applying more than 48VDC could cause damage to the switch.
- Be sure the proper cable is used in your network. Refer to the Cabling section of this manual for help.
- Diagnosing LED Indicators: The switch can be monitored through the LED indicators on the front panel of the switch. The LED's can help describes common problems you may encounter and where you may find possible solutions, to assist in identifying problems.
- If the power indicators do not light on when power is applied, you may have a problem with the power supply. Check for loose power connections, power losses or surges at the power outlet.
- If the switch LED's represent normal operating mode and the cable connections are correct and no data is transmitted or received through the switch, contact your Network Administrator for network configuration and status help.

Technical Specification

Standard	<p>IEEE 802.3 10Base-T Ethernet</p> <p>IEEE 802.3u 100Base-TX/FX</p> <p>IEEE802.3ab 1000Base-T</p> <p>IEEE802.3z Gigabit fiber</p> <p>IEEE802.3x Flow Control and Back Pressure</p>
Protocol	CSMA/CD
Transfer Rate	<p>14,880 pps for 10Base-T Ethernet port</p> <p>148,800 pps for 100Base-TX/FX Fast Ethernet port</p> <p>1,488,000 pps for Gigabit Fiber Ethernet port</p>
Memory Buffer	1Mbits
MAC address	8K MAC address table
LED	<p>8 ports 10/100TX : Link/Activity (Green), Full duplex/Collision (Yellow)</p> <p>Giga port: Link/Activity (Green)</p> <p>Per unit: Power 1 (Green), Power 2 (Green), Fault (Red)</p>
Network Cable	<p>10Base-T: 2-pair UTP/STP Cat. 3, 4, 5 cable EIA/TIA-568 100-ohm (100m)</p> <p>100Base-TX: 2-pair UTP/STP Cat. 5/5E cable EIA/TIA-568 100-ohm (100m)</p> <p>1000Base-TX: 2-pair UTP/STP Cat. 5E/6 or above cable EIA/TIA-568 100-ohm (100m)</p>

Optical cable	<ul style="list-style-type: none"> ■ Multi-mode: 50/125µm or 62.5/125µm ■ Single-mode: 9/125µm
Back-plane (Switching Fabric)	5.6Gbps
Packet throughput ability	8.3Mpps at 64bytes
Power Supply	12 to 48 VDC Redundant power with reverse polarity protection and removable terminal block
Power consumption	6.76 Watts
Install	DIN rail or panel/wall-mount
Operation Temp.	-40°C to 75°C
Operation Humidity	5% to 95% (Non-condensing)
Storage Temperature	-40°C to 85°C
Case Dimension	IP30, 72 mm (W) x 105 mm (D) x 152mm (H) (2.8 x 4.1 x 6.0 inches)
EMI	FCC Class A CE EN61000-4-2/3/4/5/6/8/11/12 CE EN61000-6-2 CE EN61000-6-4

Safety	UL cUL CE/EN60950-1
Stability testing	IEC60068-2-32 (Free fall) IEC60068-2-27 (Shock) IEC60068-2-6 (Vibration)