




Model USTL4

Connect an RS-485/RS-422 Network to the USB Port

The **USTL4** is a USB (Universal Serial Bus) port to 2 or 4-wire RS-485/422 converter. This converter requires no PCI/ISA slots or IRQs. Simply plug it into an available USB port on your computer or hub. Windows will configure the converter as an additional COM port, compatible with your Windows applications.

The serial port side can be set up for an RS-422 or RS-485 network. A pair of LEDs shows when RS-485/422 data is being received or transmitted. The USB side permits quick setup. Just plug in the USTL4 and Windows will install the drivers and set up the converter. The USB bus supplies power so no separate power supply is needed.

Installation for Windows

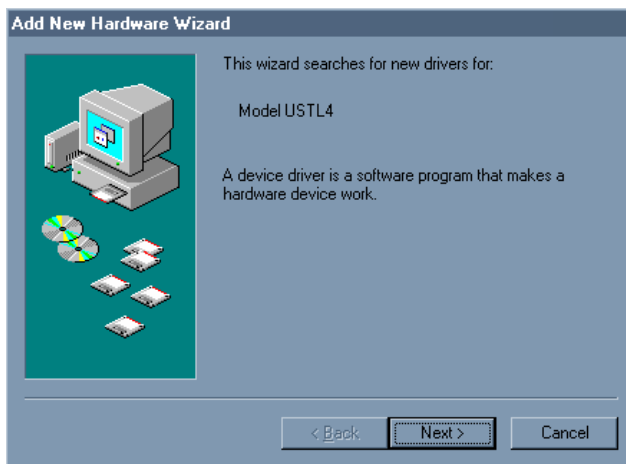

#1. Plug the USTL4 into an available USB port on your computer or connected hub. The screen above appears, telling you that there is a new device plugged into the USB bus. Click on the **Next>** button.



#2. The screen above appears. Make sure *Search for the best driver for your device* is selected. Then select the **Next>** button.



#3. The screen above appears. Make sure *CD-ROM drive* is selected. Insert the *USTL4 Driver CD* into the CD-ROM drive. Then select the **Next>** button.



#4. The screen above appears. Make sure *Model USTL4 (B&B's USB to RS-485)* is listed as the device. Then select the **Next>** button.

B&B electronics
MANUFACTURING COMPANY

International Headquarters: 707 Dayton Road PO Box 1040 Ottawa, IL 61350 USA
815-433-5100 Fax 433-5104 www.bb-elec.com orders@bb-elec.com support@bb-elec.com

European Headquarters: Westlink Commercial Park Oranmore Co. Galway Ireland
+353 91 792444 Fax +353 91 792445 www.bb-europe.com orders@bb-elec.com support@bb-europe.com



#5. The screen above will appear. Click the **Finish** button to complete the installation.



#6. You will also need to continue to install the serial port the same as installing the converter. Click the **Next** button followed by the **Finish** button. It will take a couple seconds for the serial port to be installed.

RS-485 Control

No special software is required to control the RS-485 receiver or transmit line driver. The driver is automatically enabled during each byte transmitted in RS-485 mode. The transmitter is always enabled in RS-422 mode. The receiver is tri-stated during each byte transmitted in the echo-off mode. The receiver is always enabled in the echo-on mode. There are 4.7k Ohm pull-up/pull-down resistors on the RDA and RDB lines. A termination resistor may be added to R16 if needed. See B&B's RS-422/RS-485 Application Note (available on our website or by mail) for more information on termination and DC biasing of an RS-485 network.


Dip Switch Set-up

Dip switches allow the module to be configured for two-wire or four-wire, RS-422 or RS-485 modes. In two-wire mode the TDA (-) and RDA (-) are tied together and so are TDB (+) and RDB (+), making multi-dropping this converter into an existing network easy.


Switch	OFF	ON
One	TD always enabled (TD 422)	TD only enabled during data transmission. (TD 485)
Two	RD always enabled (ECHO ON)	RD disabled during data transmission. (OFF)
Three	Four-wire mode (4-Wire)	Two-wire mode (2-Wire)
Four	Four-wire mode (4-Wire)	Two-wire mode (2-Wire)

Specifications

Dimensions: 2.7 x 5.1 x 0.9 in (6.9 x 13.0 x 2.3 cm)
 Temperature Range: 0 to 70°C (32 to 158°F)
 RS-485/422 Baud Rate: Up to 460.8 kbps
 USB Baud Rate: High speed device
 USB Power: Low power device (draws < 100mA)
 Operating System: Windows 98/SE, 2000, ME, XP
 Accessories: Driver CD

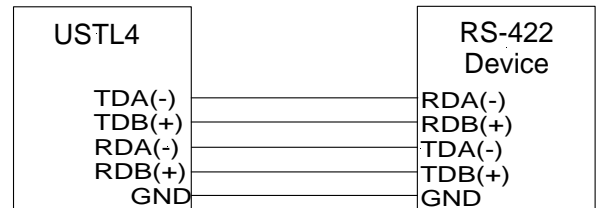

USTL4 in a four-wire set-up with all switches in the OFF position.

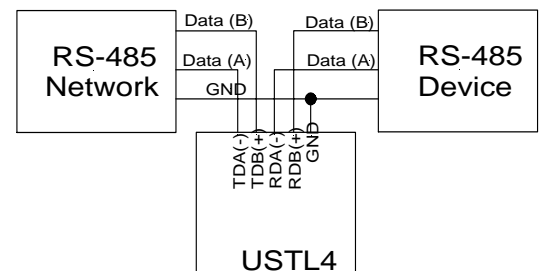

USTL4 in a two-wire set-up with all switches in the ON position.

DECLARATION OF CONFORMITY

Manufacturer's Name: B&B Electronics Manufacturing Company
 Manufacturer's Address: P.O. Box 1040
 707 Dayton Road
 Ottawa, IL 61350 USA

Model Numbers: USTL4
 Description: USB to RS-422/485 Converter
 Type: Light industrial equipment
 Application of Council Directive: 89/336/EEC
 Standards: EN 55022
 EN 61000-6-1
 EN 61000 (-4-2, -4-3, -4-4, -4-5, -4-6, -4-8, -4-11)

Robert M. Paratore
 Robert M. Paratore, Director of Engineering



International Headquarters: 707 Dayton Road PO Box 1040 Ottawa, IL 61350 USA
 815-433-5100 Fax 433-5104 www.bb-elec.com orders@bb-elec.com support@bb-elec.com

European Headquarters: Westlink Commercial Park Oranmore Co. Galway Ireland
 +353 91 792444 Fax +353 91 792445 www.bb-europe.com orders@bb-elec.com support@bb-europe.com